

出水閥組更換清潔步驟

Replacement and cleaning of Coolant Valve

1. 利用板手鬆開出水閥並取出

Use a wrench to loosen coolant valve and take it out.



2. 取下後先量測最高端到銅墊片的距離

After removing the coolant valve, firstly measure the distance from the highest point to the copper gasket.



3. 從彈簧中間的孔插入板手,旋轉前端紅色部分即可取下

Put a wrench through the spring, and rotate the red circled part to take it out.



4.清潔後在平滑的台面利用砂紙推磨出水閥後裝回

After cleaning, use a sandpaper to polish the cooling valve on a smooth surface and then reinstall it back.

